 
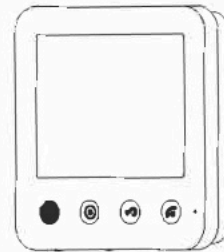 


4-WIRED VIDEO RECORDER WITH 4 "COLOR DISPLAY

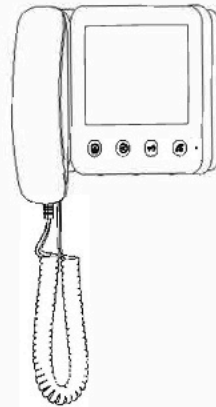

- E400FC
- E401FC

CE FC   **R&TTE RoHS** 
ISO9001 ISO14001 OHSAS18001

Introduction.....	2	7. Do not disturb mode	8
Features and Parts.....	3	8. Adjusting the volume	9
Control.....	4	8.1. Adjusting the volume of the call	9
1. ON / OFF	5	8.2 Adjusting the ring volume	9
2. Reminder of the call	5	9. Color / brightness adjustment	9
3. Conversation / Termination	6	10. Reset	9
3.1 Transferring a call for a conversation	6	11. The busy mode	10
3.2. Translation monitor for a conversation	6	12. Selecting a doorphone number	10
3.3. Waiting for a conversation	6	13. Signaling	11
3.4 Transferring a call	7	13.1 A signal of a number conflict	11
3.5 Hanging the handset	7	13.2. Signal about communication problem	12
4. Viewing the call panel	7	Indication / Sound message	13
5. Opening the lock	7	Possible malfunctions	14
6. Intercom	8	Specification	15

Thank you for purchasing our intercom. Please read the instructions before installation and operation. If you encounter any problems, contact your supplier.

Main functions

- Set of tunes
- View mode and door open
- Touch buttons

Brightness / Color Adjustment

Connection of up to 4 intercoms with intercom function and call forwarding



 
WARNING: To reduce the risk of electric shock, please do not disassemble the device yourself. Contact the service center.



When operating and servicing the device, observe the operating instructions specified in this manual.

NOTE

*The manufacturer reserves the right to change design, functions, features and characteristics without prior notice to the customer, in order to improve the quality of the product.

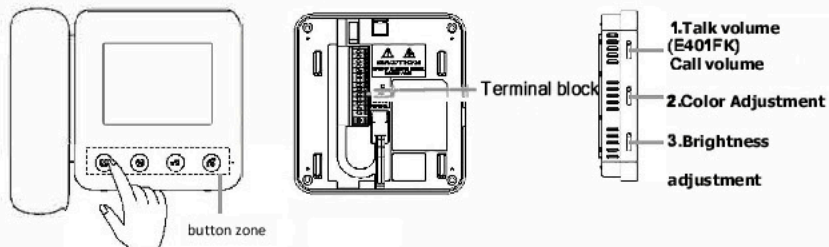

- Preview button
- Intercom button / Do Not Disturb indicator
- Button for opening the lock / Button for selecting tunes
- Talk button / Power button and indicator

NOTE

1. Button functions for the E400FC and E401FC models are almost identical, except for talking.
2. When working, press the center of the button as shown in the figure.


CONTROL**1. Power on / off**

- a. After power is applied, the "DI" sound will be heard, then the indicator will turn red, the device will enter the standby mode.
- b. In standby mode, press and hold to turn on, the indicator will turn off.
- c. In off mode, press to enter the standby mode.

2. Reminder on call**a. Standby mode**

When you receive a call from the panel, the monitor screen will display the image automatically. The indicator will flash.

 Note: If there is a call from 1 panel the indicator will turn blue, if there is a call from 2 panel it will turn green.

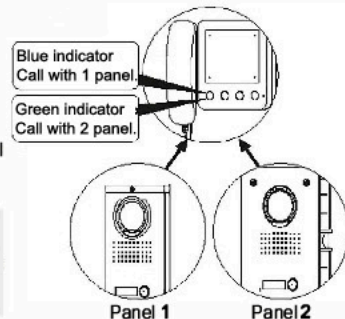**b. Talk mode**

If you are in a call with one call, a call is made from the other panel, there will be no ringing tone, but the light will flash 10 times.

3. Conversation / Termination of conversation

3.1 Transition to a call from a panel

When you receive a call from the panel, press to start the conversation. When using the E400FC model, it is necessary to remove the handset)

Note: When called from 1 panel, the indicator will turn blue, when 2 panels come in, the indicator will turn green

3.2 Conversation in Preview Mode

If the intercom is in the preview mode, press to start the conversation. (When using the model E400FC, you need to remove the handset)

Note: If you are talking to 1 panel, press to switch to 2 panels.

3.3 Standby talk

In standby mode, press to talk with 1 call panel

Note: When using the model E400FC , you just need to remove the handset.

3.4 Transferring a Call

During a conversation with the main intercom, press to switch to the interphone you want, then press to transfer the call. An additional doorphone will sound a ringing tone, press to start the conversation. The main monitor goes into busy mode.

3.5 Replace the handset

In talk mode, press to exit. Or wait 90 seconds to automatically exit.

4. Viewing the call panel

In standby mode, press to view the panel 1. To view the other channels DOOR 1/DOOR2/EXIT, press the button again. The doorphone will not show the panel 1 if only the panel2 is connected.

5. Opening the lock

During a call with the door panel, press to open the door. If you hold the button, the door lock will be permanently open.

6. Intercom

A. If you use only 2 intercoms, press and hear the DI, then press to call another doorphone.

B. If you use more than 2 intercoms, press the button and the doorphone button indicators will light up, then to make a call to the corresponding monitor, press the necessary button - the order of the buttons corresponds to the monitor number in the system from left to right.

Example, if you want to call intercom 3, press when the indicator is flashing, press to call intercom 3.

Example: the Mute indicator (green) means intercom 1 intercom indicator (green)

indicator Unlock (green) means intercom 3

Power indicator (green) means intercom 4

7. Do not disturb the mode. The monitor responds to calls, but the melody is not played. In standby mode, press and hold, hear the MDI sound, the indicator will turn on, the intercom will go into Do Not Disturb mode.

In standby mode, press and hold, hear two sound of DI DI, the indicator will turn off, the intercom will exit the mode without disturbing.

Adjusting the volume

8. Adjusting the volume of the conversation

When you are in talk mode, adjust the volume with the slider on the side of the monitor.

Note. In the model there is no adjustment of the volume of the conversation.

C. Setting the ringer volume

In call mode, adjust the volume of the call with the slider.

 
9. Color / Brightness Adjustment

In the playback mode, the sliders adjust the color / brightness to the desired level.

10. Resetting

In standby mode, press and hold the button, hear the sound of DI CI, all the lights will light, then turn off, release the button, the settings will return to the factory settings.

Note: After reset, the sound of a call from 1 panel is default: DYNDONG, the playing time is 30 seconds.

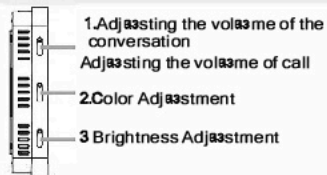

Busy mode

When one monitor is in the front of the conversation or browsing, the other intercoms will be in busy mode. After the end of the conversation or viewing, all the intercoms will go into standby mode.

Note: If the intercom is in busy mode, the number setting and reset functions do not work.

12. Setting the doorphone number**12.1 Automatic setting of the doorphone number****A. First intercom**

Turn off and on the power of the doorphone monitor, then make a call from the panel.

The number will be automatically set.

B. Second Intercom

Turn off and on the power of the doorphone monitor, then make a call from the panel.

C. Using more than 2 doorphones

Turn off the power of the doorphone monitors, then turn on the power of the first (main) and second intercom. Make a call from the monitor number 2. The number of doorphones will be set automatically after the call. After that, connect the power to the intercom # 3, call. The number will be set automatically after the call.

Also perform an operation with intercom # 4

12.2 Manual setting of the doorphone number

In the standby mode, press and hold for about 3 seconds until you hear the DI CI signal, you are in the manual intercom setting mode.

Each indicator shows its number:

Mute indicator ON 10S (green) Main doorphone

indicator Intercom 10S(green) Doorphone 2

Indicator Unlock ON 10S (green) Doorphone 3

Power indicator ON 10S (green) Doorphone 4

During installation, press to switch the monitor number, then press to save the setting.

Note: The device will exit the mode automatically if no action is taken within 10 seconds.

13. Signaling**13.1 Conflict signal for numbers**

If the same doorphone numbers are set in the system, the monitor will sound the DI at intervals. You must reset the phone number settings. If the signal repeats, restart the power.

13.2 Signal about communication problem

If domofno produces a DI DI sound every 3 seconds, there is a communication problem between the doorphones. Please check the wiring and make sure that the main intercom is switched on. After troubleshooting, press or to activate the monitor or talk with the call panel, the alarm will be automatically disabled.

1.Display status

Indicator on (red)

Indicator on (green)

Indicator on (blue)

Indicator on (green)

indicator switches (blue / green)

Indicator on (green)

Indicator on (green)

2.Sound message

"DI" through certain intervals of time, conflict with the addresses of intercoms. "DI

DI" with intervals, connectivity problems.

"DU" this function does not work.

Long DI, power unit turned on.

Power is on.

The mode does not disturb.

Call from the calling panel 1.

Call from the calling panel 2.

Call from another calling panel.

In standby mode, set up a call.

In the talk mode, the door is open.

In the talk mode.

Problems	Possible reason	Solution
Monitor doesn't work.	- The power isn't connected. - The intercom is switched off.	-Connect the power. -Turn on the power of the 'ON / OFF'
No call from outside panel	-The connection between the intercom and the door panel is broken. -The intercom is off.	-Remove the communication fault between the intercom and the door panel. -Turn on the power "ON / OFF."
Can't view the video from the panel.	-The intercom number isn't set. - The connection between the intercom and the calling panel is broken.	-Repeat the operation 12 'Room Number Setup', to set the new number. -Remove the communication between the intercom and the call panel
Sound message "DI DI" when connecting more than one monitor.	-The main intercom is switched off. -The connection between the primary monitor and the additional one has been broken.	-Turn on the power OFF. -Remove the communication fault between the intercom and the door panel.
Permanent audio message DI DI when connecting additional intercoms.	- Conflict of intercom numbers.	-Repeat step 12 "Room Number Setup", to set a new intercom number
There is no call, there is no video viewing from the call panel and sound «DI DP» with intervals.	-No main intercom in the system. -The main monitor is forced out.	-Repeat the operation 12 'Room Number Setup', reset the settings, set the number, -Turn on power on / off.
The sound from the intercom is heard normally, and from the call panel sounds bad	- Volume control is low.	-Repeat operation 8 "Talk Volume Adjustment", to adjust the volume of the sound.
When connected to one intercom, there is no invention and conversation.	-The intercom isn't the main one.	-Repeat step 12 "Room Number Setup", reset the settings, set the number.

Option \ Model	E400FC	E401FC
Display	4 'Color TFT display	
Supply/ consumption	AC100-240 -50Hz / 60Hz 15VAw DC 13.5-15V / 1.5A	
Connection	Consistently	
Method of communication	With handset	Without handset
Power Consumption	13.5V/400mA (MAX)	
CCTV video format	Composite 1Vp-p (75ohm)	
Working temperature	-10°C to +55°C	
Additional intercoms	Any 4-wire FC intercoms KENWEI	
Add. calling panels	Any 4-wire calling panels	